




## Wireless Keypad Program Instructions



DIY Automatic Gate Kits  
Solar & Low Voltage Specialists  
PH 1800 111 930

[info@gforceautogates.com.au](mailto:info@gforceautogates.com.au)  
[www.gforceautogates.com.au](http://www.gforceautogates.com.au)

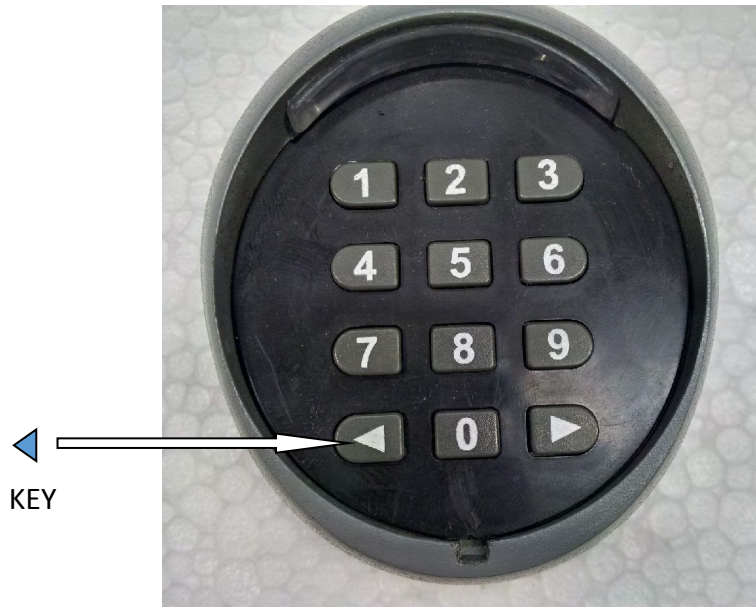

### Programming the Enter Code

1. On the keypad press "0" key and hold. Now press the ◀ key. You should hear a long beep and release both keys.
  2. Enter the factory code "11" and press and release the ◀ key.
  3. Enter the new code (up to 8 digits) and press and release the ◀ key.
  4. Re-enter the new code and press the ◀ key. You should hear a long beep.
- To activate the gate motor with the keypad, enter your code followed by the ◀ key.

### Changing the Enter Code

1. On the keypad press "0" key and hold. Now press the ◀ key. You should hear a long beep and release both keys.
  2. Enter the current entry code and press and release the ◀ key.
  3. Enter the new code (up to 8 digits) and press and release the ◀ key.
  4. Re-enter the new code and press the ◀ key. You should hear a long beep.
- To activate the gate motor with the keypad, enter the new code followed by the ◀ key